

Inside the aluminum relay panel located inside the passenger door of the cart.

1. Unplug the top row of wires (long single black plug) by pulling outwards on it.
 2. Fold them upwards out of the way.
 3. The battery holder is located just above the # 10 pin on the right side of that black plug.
- SEE PICTURES



