




Generator Current Sensor Swap


(2020 Only)

**Please make sure the
PTO & MONITOR OFF**


1. Remove the top screw and loosen the bottom screw from the orange Cvr2 module. Rotate the top of the module clockwise (right).

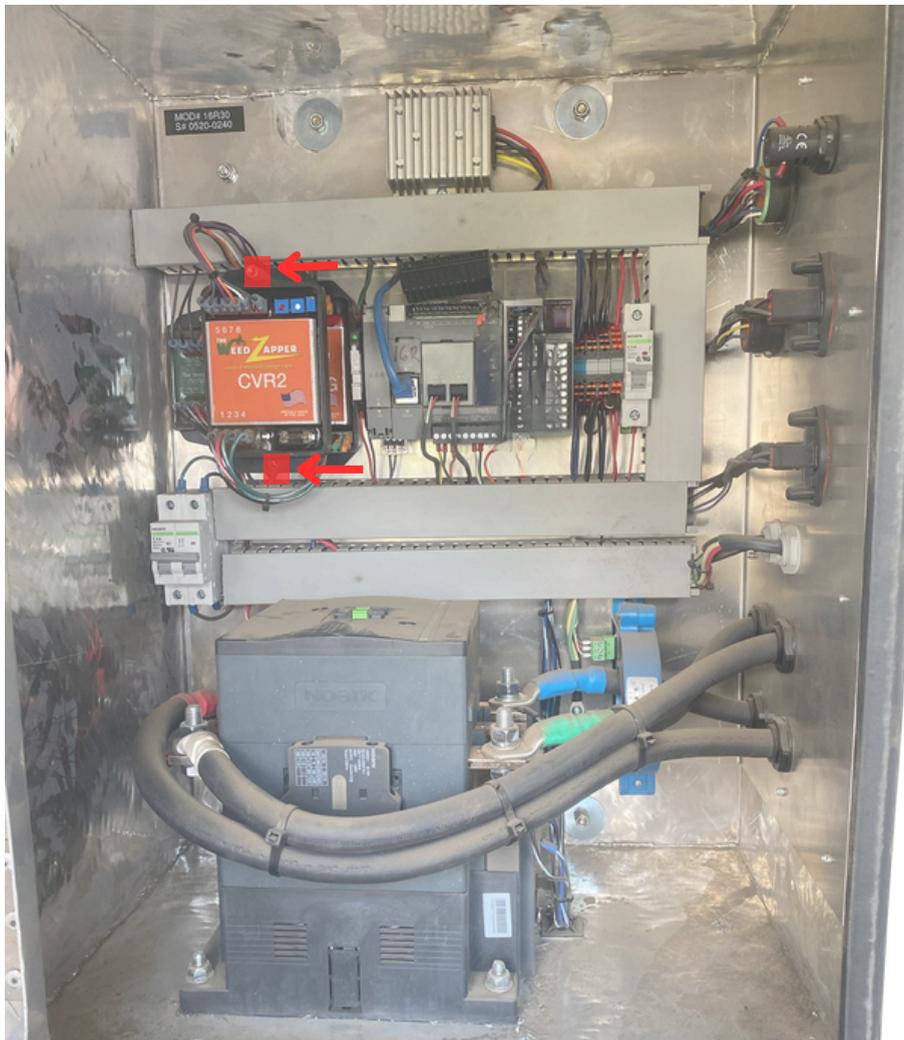

2. Move the brown wire from port #4 to port #2 marked spare FIELD AMPS reading.

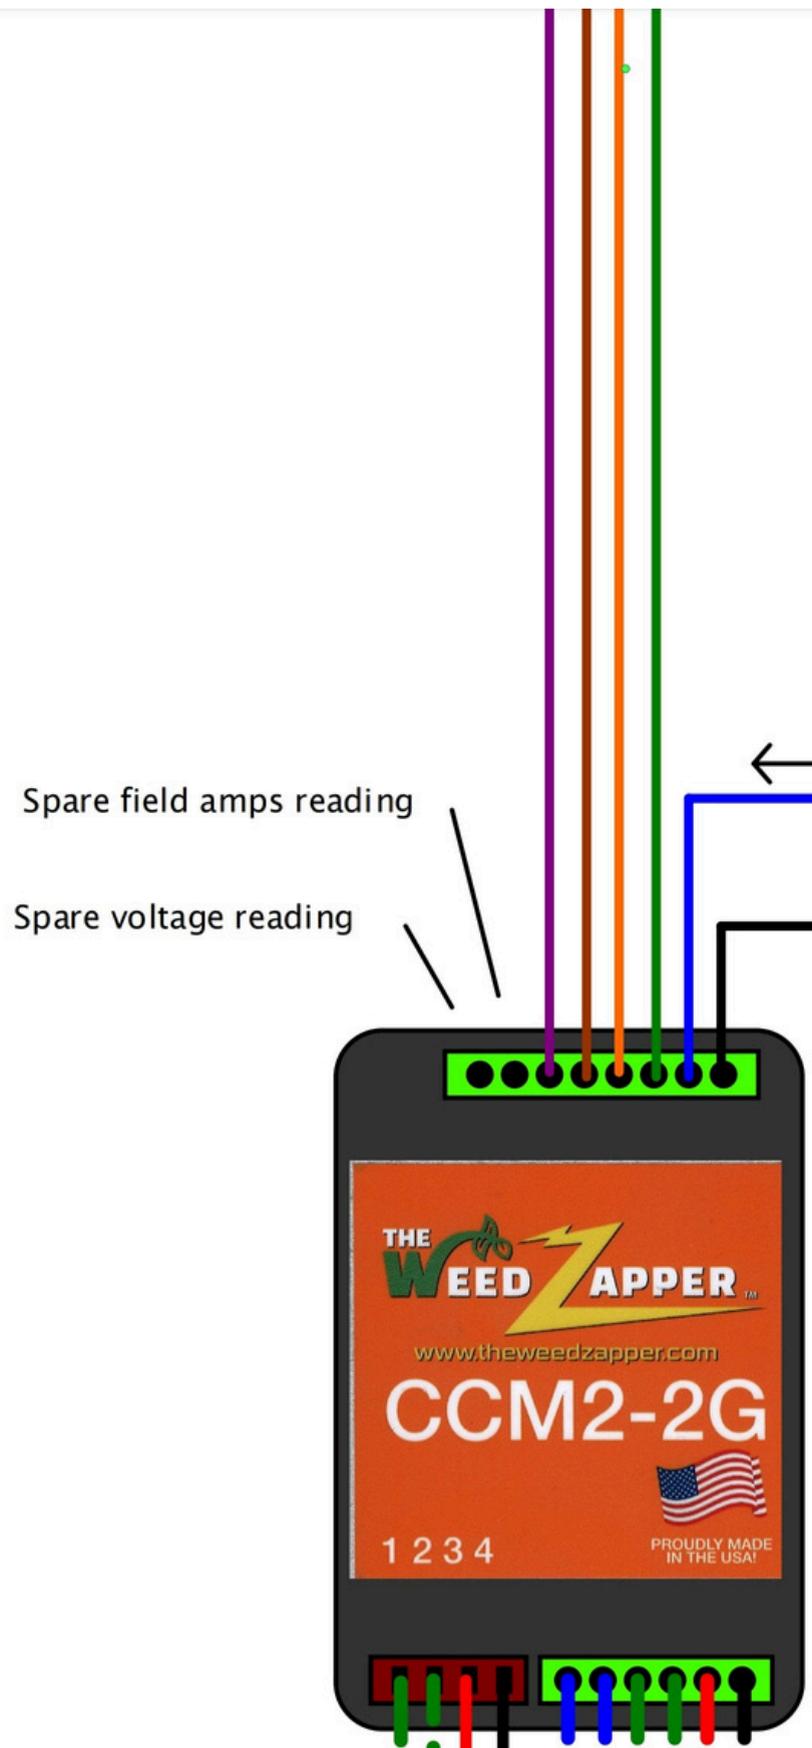

3. Check both upper and lower vertical plugs on the computer to make sure they are FULLY SEATED.

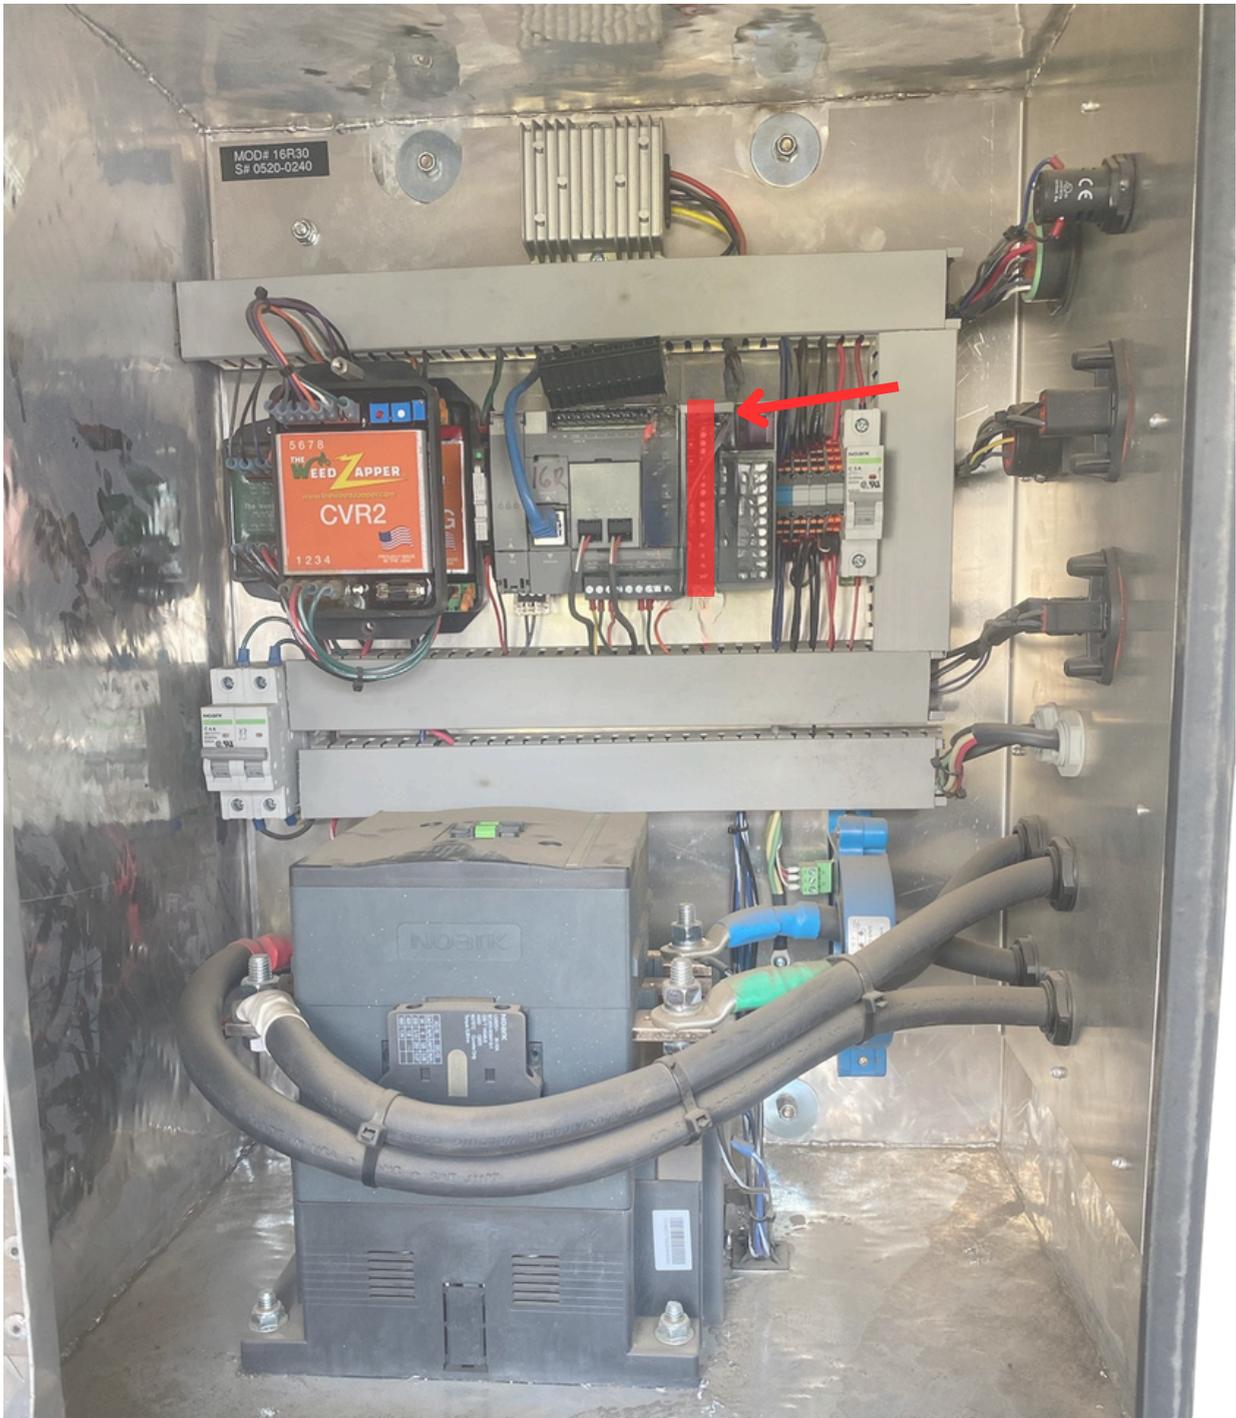

4. Run Zapper and take a photo of the Diagnostic screen while Zapping with the numbers displayed (YELLOW BUTTON press and hold for 3 seconds). Send the photo to the tech support text only line.

