

 


Generator Current Sensor Swap


(2020 Only)

**Please make sure the
PTO & MONITOR OFF**


1. Remove the top screw and loosen the bottom screw from the orange Cvr2 module. Rotate the top of the module clockwise (right).

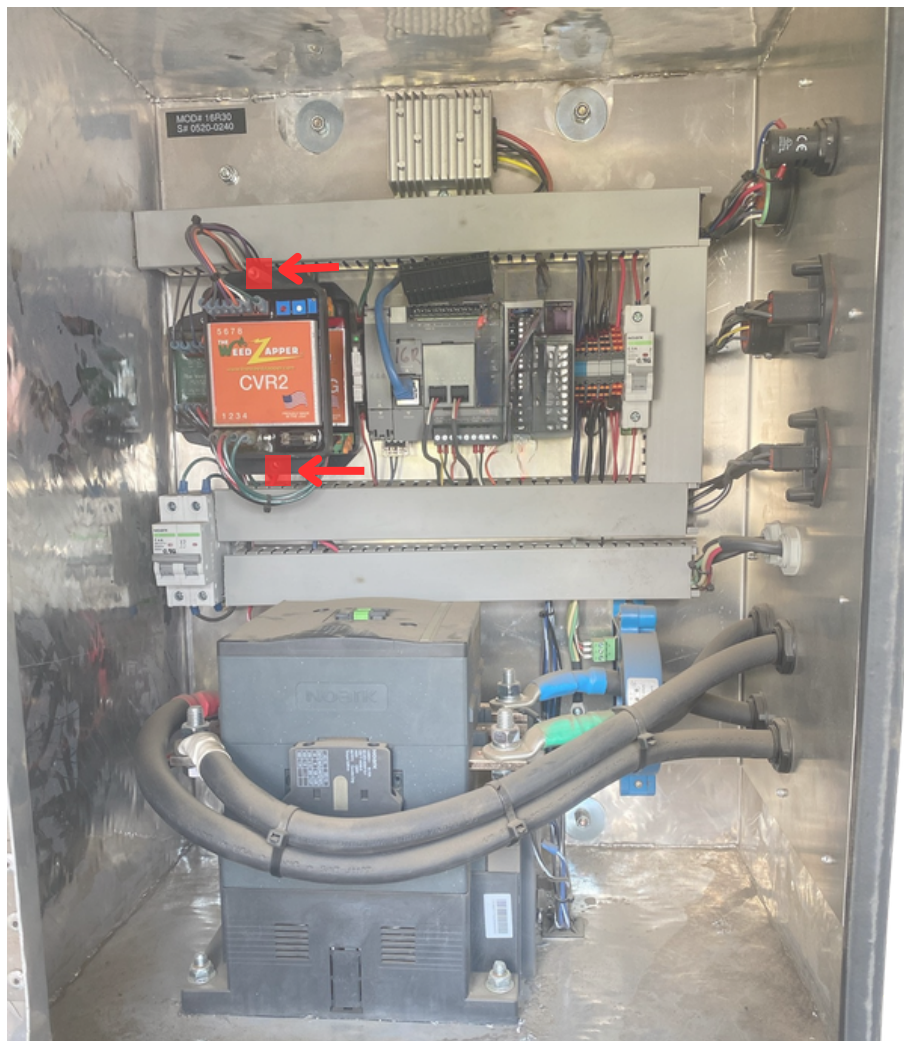

2. Push the orange button that is located above the wire to release it.
3. Move the brown wire from port #4 to port #2 marked spare FIELD AMPS reading.

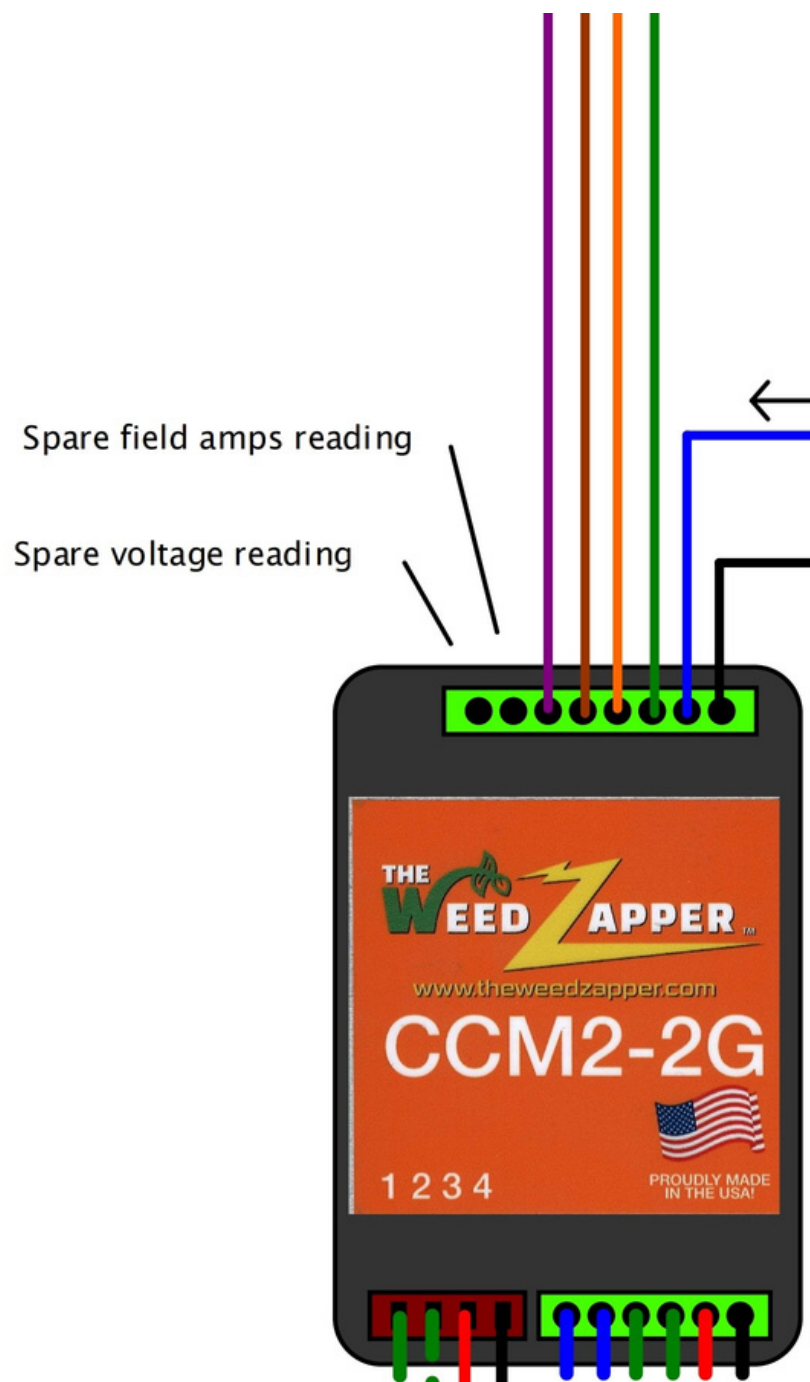

4. Check both upper and lower vertical plugs on the computer to make sure they are FULLY SEATED.

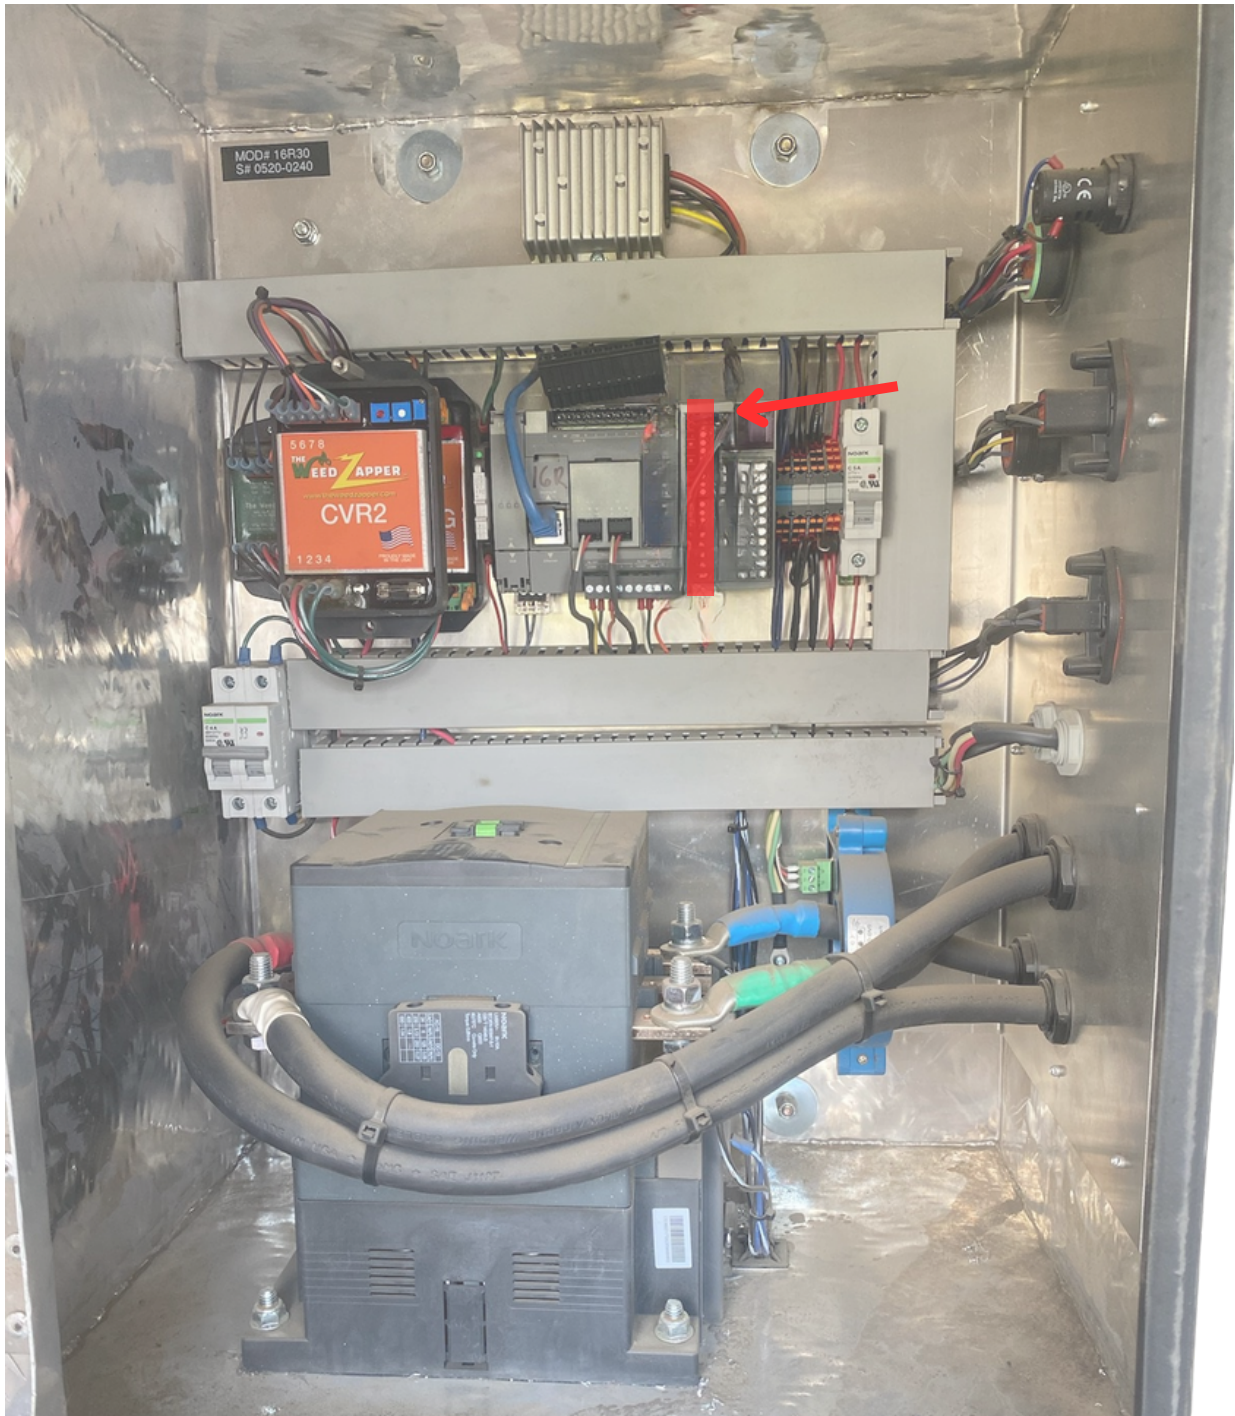

5. Operate Zapper to see if an error screen appears. If it does, take a photo of the Diagnostic screen while Zapping with the numbers displayed (YELLOW BUTTON press and hold for 3 seconds). Send the photo to the tech support text only line.

