




Primary Voltage Sensor Swap (2020 Only)

**Please make sure the
PTO & MONITOR OFF**

1. Remove the top screw and loosen the bottom screw from the orange Cvr2 module. Rotate the top of the module clockwise (right).



2. Remove the PURPLE wire from port #3 by pressing inward on the orange button just above the port. Move the PURPLE wire to port #1 marked spare VOLTAGE reading.

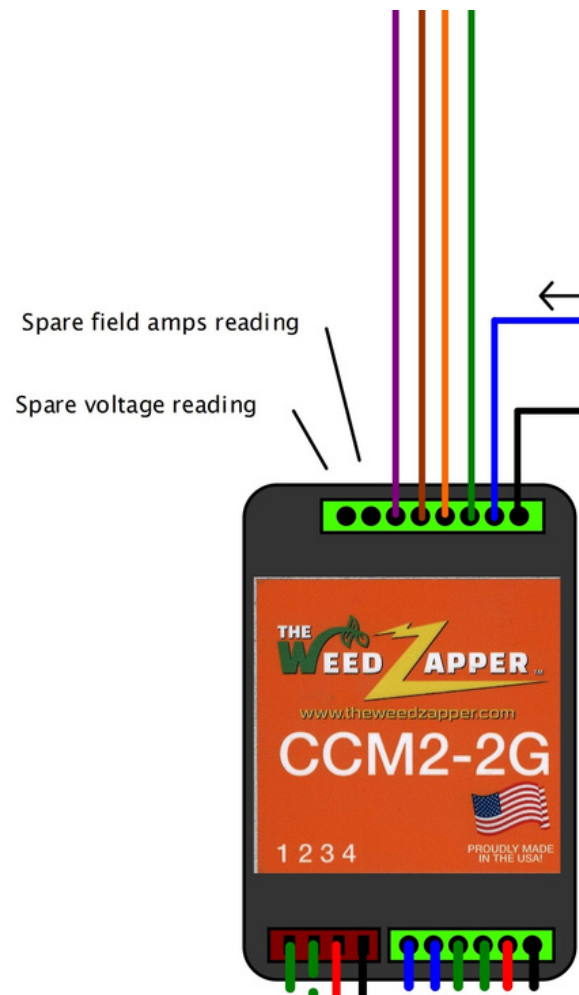

3. Check both upper and lower vertical plugs on the computer to make sure they are FULLY SEATED.

