



Small Breaker Tripping Instructions

While performing each step, turn **PTO and engine OFF**

After each step test the system by: Operating with Zapper is Running displayed on the screen. If the breaker trips or if the red screen warning displays, go on next step if the breaker does not trip and no warning appear call tech svc for further instructions.

1. Unhook cable from TOP left terminal of transformer **Photo 2 (Purple)** If the breaker trips or the warning displays the problem is a wire outside of the cart. This can be the long cable that goes forward or it can be and of the wing transfer wires on the front boom. Call tech svc for further instructions.
2. Unhook the small **GREEN** and **BLUE** cables that are marked with the **(RED)** **Photo 1**
3. Unhook the large **BLUE** and **GREEN** cables secure with zip ties **Photo 1 (Turquoise)**
4. Unhook the 2 small wires that power the switching coil. They are **BLUE** with a **white stripe**. They are removed by pressing the orange button below each wire. They are marked with **GREEN** in **Photo 3**.

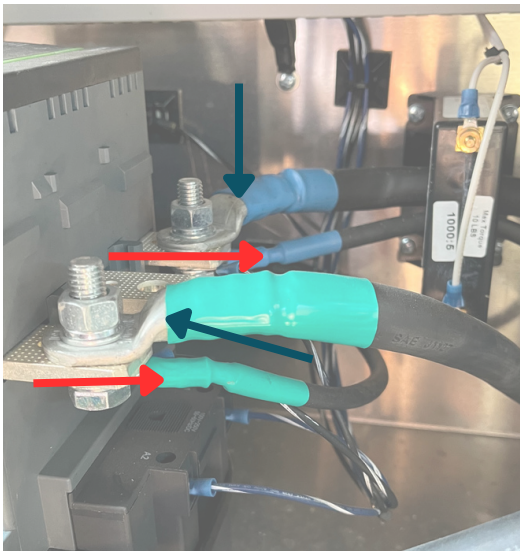


Photo 1


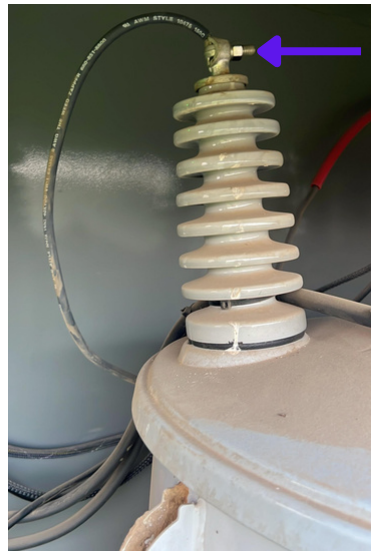


Photo 2

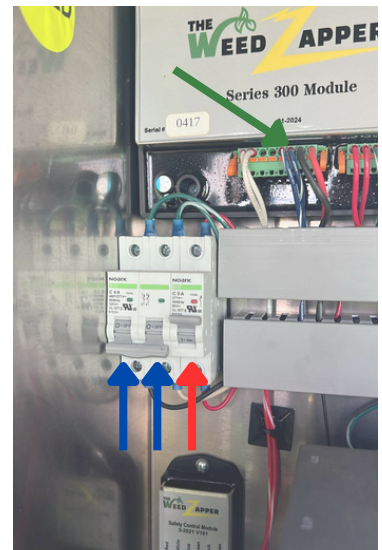

Blue arrows = tripped breaker
Red Arrow = breaker on

Photo 3